



GETTING TO KNOW YOUR **2024** **CORVETTE**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Corvette. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Power Folding Mirror
↕/Window Controls

Head-Up Display Controls
↕

Manual Shift Paddles

Turn Signal Lever/Exterior Lamps Control

Customizable Instrument Cluster

Windshield Wipers Lever



Power Door Lock/Door Release Buttons

Hood Release/Trunk Release Buttons

Cruise Control/Z-Mode/Forward Collision Alert Buttons

Electric Parking Brake Switch

Audio Favorite Station Buttons

Steering Wheel Adjustment Control


Audio Volume Buttons

Driver Information Center/Heated Steering Wheel
↕/Voice Recognition Control Buttons

SYMBOLS

 Low Tire Pressure

 BRAKE Brake System

 Antilock Brake System

 Stability Control Active

 Stability Control Off

 Driver Seat Belt Reminder

 PARK Parking Brake Set


 Charging System


 Oil Pressure

 Service Parking Brake

 Engine Coolant Temperature

 Traction Control Off

 Automatic Emergency Braking

 Performance Transmission

 Pass. Seat Belt Reminder

Engine Start/Stop Button

Infotainment System Touchscreen

Performance Data Recorder SD Card Slot (in glove box)

Glove Box Button



Auto Stop Disable/Charge+ Buttons (E-Ray model)

Transmission Shift Controls

Traction Control & StabiliTrak Off/Front Lift System (in glove box) /Curb View Camera (in glove box) Buttons

Driver Mode Control

Climate Controls/Heated & Ventilated Seat Controls

E-Ray shown

- Check Engine
- Low Fuel
- Front Lift System
- Door Ajar
- Airbag Readiness

- Security
- Lamps On Reminder
- Auto Headlamps
- Lane Keep Assist

- Vehicle Ahead
- Auto Stop
- eAWD Electric All-Wheel Drive
- Hybrid Battery Charging

Read your Owner's Manual to learn about the information being relayed by the lights and gauges of the instrument cluster.

See Introduction in your Owner's Manual.

◆ *Optional equipment*

Some equipment shown may not be included in your vehicle.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors and the fuel door. Press again to fold the power mirrors[†].

Unlock

Press to unlock the driver's door and the fuel door only or all doors, based on vehicle settings. Press and hold for 3 seconds to open all windows.

To enable automatic mirror folding[†] when using the Lock and Unlock buttons, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Remote Vehicle Start

Press twice to start the engine from outside the vehicle. The turn signal lamps will flash. After entering the vehicle, turn on the ignition.

Hood Release


 
Press twice to open the hood.


 


Hatch/Trunk Release

Press twice to open the hatch/trunk.

Lower Convertible Top[†]

Press and release the  Unlock button and then press and hold the  button to lower the top.

Press and release the  Lock button and then press and hold the  button to open the engine compartment.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The horn sounds and lights flash 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

KEY RELEASE

If vehicle power is lost, press the button on the side of the key fob to pull out the key. Use the key to open the door. Pull the looped cord below the instrument panel to open the hood for access to the battery.

Note: To change or enable some Remote Keyless Entry settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM


The system enables operation of the doors, hatch/trunk and hood without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the hatch/trunk, hood or door being unlocked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the driver's door handle touchpad (A) to unlock the driver's door only or all doors.
- ▶ Press the passenger's door handle touchpad to unlock all doors.

KEYLESS LOCKING

- ▶ Press the  Lock button on the key fob or interior door panel to lock all doors.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay once all doors are closed.



See Keys, Doors and Windows in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

 

KEYLESS ACCESS SYSTEM

PASSIVE LOCKING

- ▶ To have all doors lock automatically after a short delay once the ignition is off, the key fob is removed from the vehicle and all doors are closed, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Lock.
- ▶ To have the driver's door or all doors unlock when using the touchpad on the driver's door handle, go to Settings > Vehicle > Remote Lock, Unlock, Start > Passive Door Unlock.

HATCH/TRUNK ACCESS

 
 
The vehicle must be in Park.

- ▶ To open the hatch/trunk, press the  button twice on the key fob, press and hold the  button on the driver's door, or press the touchpad (B) above the license plate with the vehicle unlocked or, if locked, with the key fob within range.
- ▶ To close the hatch/trunk, set the decklid into the power latch. The latch will close automatically.



HOOD ACCESS

The vehicle must be in Park.

- ▶ To open the hood, press the  button twice on the key fob, press and hold the  button on the driver's door, or press the touchpad (C) in the driver-side grille opening below the headlamp.
- ▶ To close the hood, set the hood into the power latch and push briefly until the latch clicks. The latch will close automatically. **Never drive without the hood fully closed.**



AUXILIARY DOOR RELEASES

If the vehicle battery is weak or disconnected, the doors can be opened manually.

- ▶ From inside the vehicle, pull the driver's or passenger's door release handle (D) on the floor near each door opening.
- ▶ From outside the vehicle, use the mechanical key from the key fob in the key cylinder, located rearward of the driver's door handle in the air inlet (E), to open the driver's door.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be present to start the vehicle.

STARTING THE ENGINE/ON

- ▶ With the transmission in Park, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the center console rear cupholder to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

BATTERY TIPS

BATTERY LOCATION

The battery is located under a cover in the underhood compartment. To access the battery, remove the left- and right-side shields before removing the cover assembly. If vehicle power is lost, pull the manual hood release cable, located under the left side of the instrument panel, twice to open the hood.

BATTERY CHARGER♦

If the vehicle is not driven weekly, or the battery is disconnected or drained, use the optional battery maintainer to charge the battery. To operate the battery maintainer, plug it into a standard electrical outlet and into the vehicle's underhood accessory power outlet.

See Vehicle Care in your Owner's Manual.

WINDOW PROGRAMMING

To provide a tight seal, window indexing automatically lowers the window slightly when the door is opened and then automatically raises the window when the door is closed.

If battery power is disconnected, program the power windows:

1. Close all doors and start the vehicle.
2. Partially open the window to be programmed and then fully close the window. Continue to hold up the window switch briefly after the window has closed.
3. Fully open the window. Continue to hold down the window switch briefly after the window has opened.

Note: The power windows' express-close feature and the power convertible top♦ will not operate until the windows are programmed.

See Keys, Doors and Windows in your Owner's Manual.

POWER SEATS

SEAT ADJUSTMENTS

A. Seat Cushion Adjustment

Move the horizontal control to slide the seat forward or rearward, and to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar/Side Bolster Adjustment[†]

Press the round control forward or rearward to adjust the lumbar support, and up or down to adjust the side bolsters.




SET DRIVER'S SEAT MEMORY POSITIONS[†]

1. With the vehicle On and in Park, adjust the driver's seat, power outside mirrors, and power steering column[†].
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2. To identify each Remote Keyless Entry transmitter (key fob), one has a chrome flag and the other has a black flag.




To store seat and power steering column positions for more clearance when exiting the vehicle, repeat these steps using the  **EXIT** button instead of button 1 or 2.

RECALL DRIVER'S SEAT MEMORY POSITIONS[†]

- ▶ Press and hold button 1, 2 or  **EXIT** until the set position is reached.
- ▶ To set the memory/exit positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

SET PASSENGER'S SEAT MEMORY POSITIONS[†]

1. With the vehicle On and in Park, adjust the passenger's seat to the desired position.
2. Press and release the **SET** button on the passenger's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound.

To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **EXIT** button instead of button 1 or 2.

RECALL PASSENGER'S SEAT MEMORY POSITIONS[†]

- ▶ Press and hold button 1, 2 or  **EXIT** until the set position is reached.

See Seats and Restraints in your Owner's Manual.

LIGHTING

EXTERIOR LAMPS

Rotate the band to operate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 
INTERIOR LIGHTING

Instrument Brightness Control

Rotate the knob to brighten or dim the instrument panel lighting during nighttime use.

INTELLIBEAM SYSTEM

 
The system automatically turns the high-beam headlamps on/off based on traffic conditions while driving at night. A green  indicator displays when the system is on.

- ▶ With the lamp control in the AUTO or  Headlamps position, push the turn signal lever forward 2 times within 2 seconds.

ENGINE COMPARTMENT LAMPS

The engine compartment lamps will turn on briefly when any door is unlocked or opened, or when the engine compartment is opened. The lamps will turn off when all doors and the engine compartment are closed, the doors are locked, the vehicle begins to move after shifting out of Park, or the ignition is turned On.

See Lighting in your Owner's Manual.

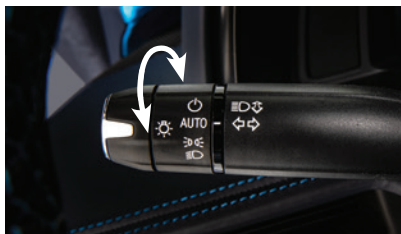

WINDSHIELD WIPERS

Move the lever up/down to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more-frequent wipes or down for less-frequent wipes.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever to spray washer fluid on the windshield.

 


See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.


INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

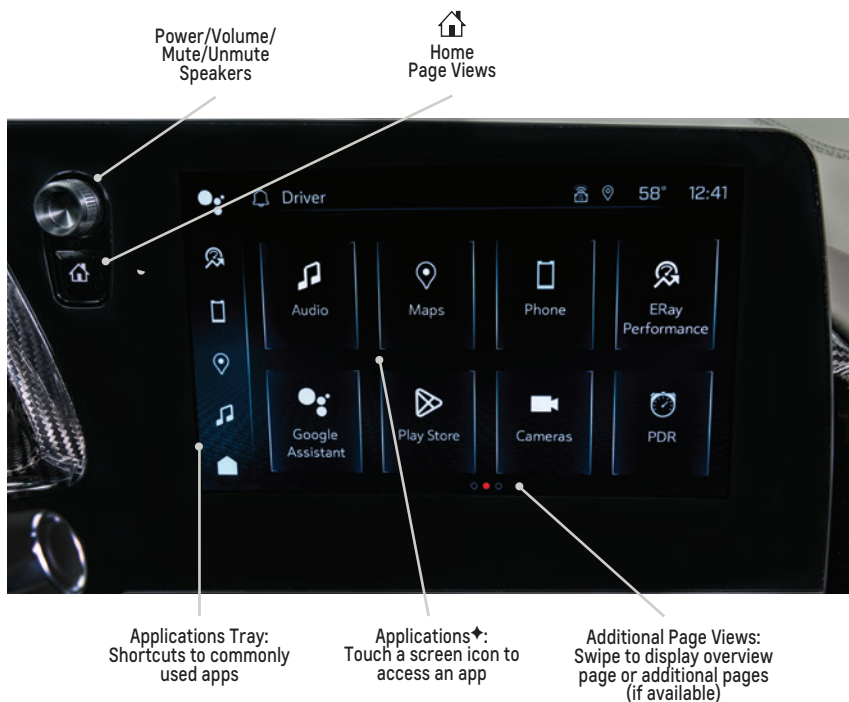

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or USB storage device, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For additional information, visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the  Home button.
2. To enter edit mode, touch and hold the icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

 
See *Infotainment System* in your Owner's Manual.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[†]) can be stored in any order.

1. Display the desired radio station. The Sources icon is at the top of the Audio page.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons to save the station.

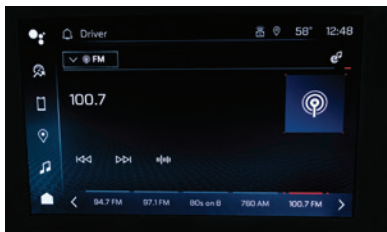

GOOGLE BUILT-IN[†]

Google built-in provides access to your favorite apps, including Google Assistant, Google Maps and Google Play.

- ▶ Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google to get hands-free help. Easily get directions, play media, control vehicle functions and more.

- ▶ To start, say “Hey Google,” tap the Google Assistant icon on the Home page, or press the **Push to Talk** button on the steering wheel.

Google Maps – Reach destinations faster with real-time traffic information, automatic rerouting and voice control. Sign in for personalized maps with home/recent locations.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

Note: Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply.

APPLE CARPLAY[®] AND ANDROID AUTO[™][†]

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. There are two ways to set up device projection:
 - **Wireless Connection** – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
2. Follow the instructions on the infotainment system and the phone.
3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
 - ▶ To exit Apple CarPlay or Android Auto, press the **Home** button. To return to Apple CarPlay or Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

[†]Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

INFOTAINMENT SYSTEM

SIRIUSXM WITH 360L*

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

USB STORAGE DEVICES

- ▶ To play a device connected to the USB data ports in the center console storage compartment, touch Audio on the infotainment screen and select the USB source.

See Infotainment System in your Owner's Manual.




BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit chevrolet.com/support for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the prompt, say "Pair phone." To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone.
2. From your phone's Bluetooth settings, select the name on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.



FIRST TO CONNECT PAIRED PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set as First to Connect.

- ▶ To set the First to Connect phone, select Settings > Connections > Phone > Options for the connected phone > First to Connect.

See Infotainment System in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Voice Recognition (Siri or Google Assistant) on a paired, compatible mobile phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Radio Station Seek

With the Audio menu displayed in the Driver Information Center, rotate the thumbwheel to seek the next or previous radio station.

Volume

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station


Press the top or bottom button to go to the next or previous favorite radio station or track.



See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING[◆]

The Wireless Phone Charging system is located between the driver's and passenger's seatbacks. Visit chevrolet.com/support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the phone, screen facing out, in the pocket.
4. The  battery charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds and rotate it 180 degrees before placing it in the pocket again.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

WI-FI HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.



OVER-THE-AIR SOFTWARE UPDATES

The infotainment system can download and install vehicle software updates through the vehicle's 4G LTE Wi-Fi Hotspot, if active, or a secured Wi-Fi Hotspot. The system will prompt for certain updates to be downloaded and installed.

- ▶ To check updates manually, go to Settings > System > Vehicle Software > Updates. Follow the on-screen prompts.

Note: For more information on Wi-Fi use, system limitations, and software updates, visit chevrolet.com/support.

See *Infotainment System in your Owner's Manual*.

VALET MODE

Valet Mode can be used to provide only authorized users with access to personalized features on the infotainment screen, glove box and center console storage compartment.

 
- ▶ To lock/unlock the infotainment screen, glove box and center console storage compartment, select Settings > Vehicle > Valet Mode and enter a passcode.
- ▶ To set the Performance Data Recorder* (PDR) to automatically record in Valet Mode, go to the PDR menu and select Settings > Automatic Recording > While in Valet Mode Only.

See *Infotainment System in your Owner's Manual*.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus on the infotainment screen, including Buckle to Drive, Lighting, Wipers, Driver Assistance and others.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press < to exit each menu.

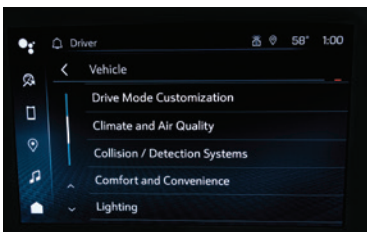

See *Infotainment System in your Owner's Manual*.

CLIMATE CONTROLS

CLIMATE CONTROL DISPLAY

- ▶ Select the Climate icon on the Home page of the infotainment screen to view the climate control display. Settings can be changed using the screen buttons or the controls on the center console.

- ▼ ▲ Driver's Temperature Control
 - Driver's Heated/Ventilated Seat Controls ♦
- SYNC Synchronize passenger's settings to driver's settings
- AUTO Automatic Operation
- Air Delivery Modes:
 - Defog
 - Vent
 - Floor
- Fan Control
- Power On/Off
- A/C Air Conditioning Control
- Recirculation Mode
- Defrost
- REAR Rear Window Defog
- Passenger's Heated/Ventilated Seat Controls ♦
- ▼ ▲ Passenger's Temperature Control



AUTOMATIC OPERATION

- ▶ Press AUTO.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If a function is manually adjusted, the Auto indicator turns off and automatic operation for that function is canceled.

See Climate Controls in your Owner's Manual.

COUPE ROOF PANEL

It may be necessary to have two people remove the roof panel. Refer to your Owner's Manual for complete instructions.

- ▶ The roof panel is secured with two front levers and one rear lever. To unlock the roof panel, pull the two front levers outward and then press the button on the front of the rear lever and pull the lever down.
- ▶ When removed, secure the roof panel with the interior facing forward and the rear pins in the lower receivers on the rear storage compartment floor. Push each front corner of the panel forward until it clicks into the upper receivers. If not properly secured, damage to the panel may occur.
- ▶ During roof panel installation, install the rear edge of the panel first.



Note: A Corvette Accessory Roof Panel Storage Bag[†] is available to protect the panel when not installed on the vehicle.







See Keys, Doors and Windows in your Owner's Manual.

CONVERTIBLE TOP OPERATION[†]

Before operating the power convertible top, ensure that the roof and tonneau cover are clear of any objects and that the trunk is closed. When possible, operate the convertible top when the vehicle is stopped. If necessary, the top can be operated at vehicle speeds up to 30 mph.





POWER TOP OPERATION

1. Start the vehicle.
2. Press and hold down the  **Convertible Top** button (A) on the driver's door to open the top; pull and hold up the  button to close the top. The windows will lower automatically.
3. A chime will sound when the top is completely open or closed.
 - ▶ To open the top using the key fob, press and release the  **Unlock** button and then press and hold the  **Convertible Top** button.
 - ▶ To open or close the tonneau cover using the key fob, press and release the  **Lock** button and then press and hold the  **Convertible Top** button.

Note: After a loss of vehicle power, program the power windows in order to operate the convertible top.

REAR WINDOW OPERATION

- ▶ Press the  **Rear Window** button (B) on the driver's door to lower the rear window. To help deflect the wind, the window will not lower completely. Pull the  button to raise the window. The window can be lowered with the convertible top up or down.

See Keys, Doors and Windows in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lockout) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security Plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see parking information and more.

*The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.*

MY CHEVROLET ACCOUNT

Get to know your vehicle and view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **chevrolet.com/owners**.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2023 General Motors LLC. All Rights Reserved.



84948181

We recommend always using
ACDelco or GM Genuine Parts.



84948181 A